Camera	Camera	Image Transm-	F	Photo	V	/ideo	Shi Spi Adjus	utter eed tment	Ape Adjus	rture stment	IS Adjus	iO tment	E Adjus	EV stment	Electronic	Halfway Press Shutter	Electronic Follow	HDMI Cable	Camera Control	Camera Settings	Camera Firmware
Branu	woder	ission	Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	20011	Button to Autofocus	Focus	туре			Version
	α9	1	$\checkmark$	1	1	V	-	-	-	-	-	-	-	-	V	V	-				V6.00
Sony	a9M2	1	1	1	√	1	-	-	-	-	-	-	-	-	√	1	-				V2.00
	a7R4	1	$\checkmark$	1	√	1	-	-	-	-	-	-	-	-	1	V	-			1. Set [HDMI Resolution] in	V1.20
	a7R3	1	V	1	1	1	-	-	-	-	-	-	-	-	V	1	-			<ul> <li>[HDMI Settings] to [1080P].</li> <li>2. Set [HDMI Info. Display] in [HDMI Settings] to [Off] to get live preview image both on camera screen and your phone via the transmitter.</li> <li>3. It is recommended to set [Auto Review] to [Off].</li> <li>4. Set the USB connection as</li> </ul>	V3.01
	α7M3	1	V	1	1	1	-	-	-	-	-	-	-	-	V	1	-				V3.10
	a7R2	1	1	1	√	1	-	-	-	-	-	-	-	-	√	1	-	HDMI Mini to HDMI Micro	Type-C to Multi USB		V4.01
	a7S2	1	$\checkmark$	1	√	V	-	-	-	-	-	-	-	-	1	V	-	Model:LN-HBHC-A03	Model: LN-UCUS-A02		V3.01
	a6600	1	1	1	1	V	-	-	-	-	-	-	-	-	V	V	-				V1.00
	a6500	1	$\checkmark$	1	√	V	-	-	-	-	-	-	-	-	V	V	-				V1.06
	a6400	1	$\checkmark$	1	V	$\checkmark$	-	-	-	-	-	-	-	-	$\checkmark$	$\checkmark$	-			"auto" or "mass storage"	V2.00
	a6300	1	$\checkmark$	1	√	1	-	-	-	-	-	-	-	-	1	√	-			ZY PLAY.	V2.01
	a6100	1	$\checkmark$	1	1	1	-	-	-	-	-	-	-	-	1	√	-				V1.00
	a7S3	1	V	1	1	V	-	-	-	-	-	-	-	-	1	1		HDMI Mini to HDMI TYPE AModel:LN-HAHB-A04	Type-C to Multi USB Model: LN-UCUS-A02		V1.01
	α9	1	$\checkmark$	1	1	$\checkmark$	V	$\checkmark$	$\checkmark$	V	$\checkmark$	V	$\checkmark$	$\checkmark$	-	√	-			1. Set the USB connection	V5.00
	a7R4	1	V	1	1	1	V	$\checkmark$	$\checkmark$	1	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$	-	√	-			as PC remote control or enable the PC remote control to adjust the	V1.00
	a7R2	1	$\checkmark$	1	1	1	V	$\checkmark$	$\checkmark$	1	$\checkmark$	V	$\checkmark$	√	-	1	-	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Micro USB Model: LN-MBUC-A01		V3.01
	α7M2	1	$\checkmark$	1	1	1	V	$\checkmark$	$\checkmark$	1	$\checkmark$	V	$\checkmark$	1	-	1	-			2. Set [HDMI Resolution] in	V4.00
Sony	a7S2	1	1	1	1	1	1	$\checkmark$	$\checkmark$	1	$\checkmark$	V	1	1	-	1	-			3. Set [HDMI Info. Display] in	V3.00
	a7S3	V	V	V	√	V	V	V	V	V	V	V	V	V	-	J	V	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Micro USB Model: LN-MBUC-A01	<ul> <li>[HDMI Settings] to [Off] to get live preview image both on camera screen and your phone via the transmitter.</li> <li>4. It is recommended to set [Auto Review] to [Off].</li> </ul>	V1.01
	GH5	V	$\checkmark$	1	V	1	V	$\checkmark$	$\checkmark$	1	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$	-	1	√			1. Please choose PC (Tether)	V2.6
	GH5S	V	$\checkmark$	1	V	1	V	$\checkmark$	$\checkmark$	V	$\checkmark$	$\checkmark$	$\checkmark$	√	-	1	√	HDMI Mini to HDMI TYPE	Type-C to Type-C	mode.	V1.6
	S1	1	1	1	1	$\checkmark$	1	$\checkmark$	$\checkmark$	1	$\checkmark$	1	$\checkmark$	√	-	1	1	AModel:LN-HAHB-A04	Model: LN-UCUS-A01	<ol> <li>Please apply electronic follow focus function in MF</li> </ol>	V1.3
Panasonic	S1H	1	$\checkmark$	1	1	$\checkmark$	1	$\checkmark$	$\checkmark$	1	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$	-	$\checkmark$	$\checkmark$			mode of the lens.	V1.0
	DC- BGH1	1	-	-	1	J	-	V	-	1	-	1	-	V	-	-	1	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Type-C Model: LN-UCUS-A01	set [Auto Review] and [Duration Time (photo)] to [Off].	V1.0

ZHIYUN

V1.10

Camera	Camera	Image Transm-	F	Photo	V	/ideo	Shi Spi Adjus	utter eed stment	Ape Adjus	rture stment	IS Adjus	SO stment	E Adjus	EV stment	Electronic	Halfway Press Shutter	Electronic Follow	HDMI Cable	Camera Control	Camera Settings	Camera Firmware
Brand	woder	ission	Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	200m	Button to Autofocus	Focus	Туре			Version
Canon	5D3	J	J	J	V	J	V	J	J	J	J	J	J	J	-	J	J	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Mini USB Model: LN-NBUC-A01	<ol> <li>Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>Set [HDMI Output + LCD] to [Mirroring] to get live preview image both on camera screen and your phone via the transmitter.</li> <li>The camera must stay in live view mode when applying image transmission feature.</li> <li>It is recommended to set [image confirmation] to [Off].</li> </ol>	V1.3.5
Canon	5D4	$\checkmark$	J	7	J	J	J	J	J	J	$\overline{}$	J	V	J	-	J	J	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Micro USB Model: LN-MBUC-A01	<ol> <li>Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>When the camera is in Video mode, select HDMI display &gt;Camera + Monitor to get live preview image both on camera screen and your phone via the transmitter.</li> <li>The camera must stay in live view mode when applying image transmission feature.</li> <li>It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.0.4
	5DS	V	V	1	1	V	1	1	V	V	$\checkmark$	V	V	1	-	1	1		Type-C to Micro USB Model: LN-MBUC-A01	1. Please apply electronic follow focus function in AF	V1.1.1
	5DS R	J	J	J	J	J	J	J	J	J	Y	J	J	J	-	J	J	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Micro USB Model: LN-MBUC-A01	<ul> <li>mode of the lens and live view mode of the camera.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. The camera must stay in live view mode when applying image transmission feature.</li> <li>4. It is recommended to set [Image Confirmation] to [Off].</li> </ul>	V1.1.2R

Camera	Camera	Image Transm-	F	Photo	V	/ideo	Shu Spo Adjus	utter eed stment	Ape Adjus	rture stment	IS Adjus	iO tment	E Adjus	EV stment	Electronic	Halfway Press Shutter	Electronic Follow	HDMI Cable	Camera Control	Camera Settings	Camera Firmware
Brand	Model	ission	Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Zoom	Button to Autofocus	Focus	Туре	Cable Type		Version
	6D	J	J	J	J	J	V	V	J	~	J	J	J	J	-	J	J	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Mini USB Model: LN-NBUC-A01	<ol> <li>Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>The camera must stay in live view mode when applying image transmission feature.</li> <li>It is recommended to set [image confirmation] to [Off].</li> </ol>	V1.1.8
	6D2	$\checkmark$	7	J	J	J	J	J	7	V	$\checkmark$	7	J	J	-	J	J	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Mini USB Model: LN-NBUC-A01	<ol> <li>Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>The camera must stay in live view mode when applying image transmission feature.</li> <li>It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.0.4
Canon	80D	V	J	J	J	J	J	J	V	V	~	J	J	J	-	J	J	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Mini USB Model: LN-NBUC-A01	<ol> <li>Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>The camera must stay in live view mode when applying image transmission feature.</li> <li>It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.0.2
	90D	J	J	J	1	J	1	J	J	J	J	J	J	1	-	J	J	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Mini USB Model: LN-NBUC-A01	<ol> <li>Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>The camera must stay in live view mode when applying image transmission feature.</li> <li>It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.1.1

Camera	Camera	Image Transm-	F	Photo	v	ïdeo	Shu Spo Adjus	utter eed stment	Aper Adjus	rture tment	IS Adjus	iO tment	E Adjus	:V stment	Electronic	Halfway Press Shutter	Electronic Follow	HDMI Cable	Camera Control	Camera Settings	Camera Firmware
Brand	wodei	ission	Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	200m	Button to Autofocus	Focus	туре			Version
	EOS R	J	J	J	J	J	J	~	V	J	V	J	J	J	-	J	V	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Type-C Model: LN-UCUS-A01	<ol> <li>Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>When the camera is in Video mode, select HDMI display &gt;Camera + Monitor to get live preview image both on camera screen and your phone via the transmitter.</li> <li>It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.3.0
Canon	EOS R5	J	J	J	J	J	J	J	J	J	J	J	J	J	-	J	J	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Type-C Model: LN-UCUS-A01	<ol> <li>Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>When the camera is in Video mode, select HDMI display &gt;Camera + Monitor to get live preview image both on camera screen and your phone via the transmitter.</li> <li>It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.1.1
	EOS R6	J	V	J	J	J	J	V	V	V	V	V	J	J	-	J	J	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Type-C Model: LN-UCUS-A01	<ol> <li>Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>When the camera is in Video mode, select HDMI display &gt;Camera + Monitor to get live preview image both on camera screen and your phone via the transmitter.</li> <li>It is recommended to set [Image Confirmation] to [Off]</li> </ol>	V1.1.1

Camera	Camera	Image Transm-	F	Photo	\ \	/ideo	Sh Sp Adjus	utter eed stment	Ape Adjus	rture stment	IS Adjus	SO stment	E Adjus	EV stment	Electronic	Halfway Press Shutter	Electronic Follow	HDMI Cable	Camera Control	Camera Settings	Camera Firmware
Brand	Model	ission	Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Zoom	Button to Autofocus	Focus	Туре	Cable Type		Version
Canon	EOS RP	J	J	J	V	J	V	J	-	-	J	V	J	J	-	J	J	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Type-C Model: LN-UCUS-A01	<ol> <li>Please apply electronic follow focus function in AF mode of the lens.</li> <li>Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>Set [HDNI info disp] to [Clean / 4K output] or [Clean / 4K output] or [Clean / FHD output]] to get live preview image both on camera screen and your phone via the transmitter.</li> <li>It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.3.0
Nikon	D850	J	J	J	V	J	J	J	J	J	V	J	J	J	-	J	J	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Micro USB Model: LN-MBUC-A01	<ol> <li>Please apply electronic follow focus function in M/A mode of the lens and AF-S or AF-C mode of autofocus mode.</li> <li>Set [Output Resolution] of camera [HDMI] to [1080P].</li> <li>The camera must stay in live view mode when applying image transmission feature.</li> <li>It is recommended to set [Image Review] to [Off].</li> </ol>	V1.02
	Z5	1	V	1	1	V	V	1	V	1	V	1	V	J	-	√	1			1. Please apply electronic follow focus function in M/A mode of the lens and AE S or AE C mode of	V1.00
	Z6	1	V	1	1	V	V	1	1	1	V	1	V	1	-	√	1	HDMI Mini to HDMI Mini	Type-C to Type-C	<ul><li>autofocus mode.</li><li>2. Set [Output Resolution] of camera [HDMI] to [1080P].</li></ul>	V2.01
Nikon	Z611	1	V	V	V	V	V	1	V	V	V	V	$\checkmark$	V	-	V	√	Model:LN-HBHB-A03	Model: LN-UCUS-A01	<ol> <li>It is recommended to set [Image Review] to [Off].</li> <li>Due to the setting of the compare system, when</li> </ol>	V1.00
NIKOH	Z7	1	V	V	1	V	1	1	V	V	V	1	1	V	-	V	V			the frame frequency is 100p/120p/slow motion, HDMI output is not	V2.01
	Z50	1	1	J	1	J	V	1	1	1	1	1	1	V	-	J	J	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Micro USB Model: LN-MBUC-A01	available. 5. Due to the setting of the camera system, when N-Log/HDR(HLG) is enabled, the video shooting in camera cannot be controlled.	V1.00

### ZHIYUN

### TransMount Image Transmission Transmitter 2.0 Camera Compatibility List

Camera	Camera	Image Transm-	F	Photo	\	/ideo	Shu Spo Adjus	utter eed stment	Ape Adjus	rture stment	IS Adjus	SO stment	E Adjus	EV stment	Electronic	Halfway Press Shutter	Electronic Follow	HDMI Cable	Camera Control	Camera Settings	Camera Firmware
Brand	Model	ission	Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Zoom	Button to Autofocus	Focus	Туре	Cable Type		Version
	XT3	J	~	J	J	J	V	V	-	-	V	V	V	V	-	J	J	HDMI Mini to HDMI Micro	Type-C to Type-C	<ol> <li>Set [connection mode] in [connection setting] to [USB AUTO];</li> <li>Click [button/dial setting] in [setting] and select [command] for [ISO dial setting (A)]; Select [command] for [aperture ring setting (A)]</li> </ol>	V3.10
FUJIFILM	XT4	J	$\checkmark$	J	J	J	V	V	-	-	V	V	V	V	-	J	J	Model:LN-HBHC-A03	Model: LN-UCUS-AUT	proto taking, click (power management) in camera setting and select [boost] for [performance]; 4. When using the camera for video taking, set [shutter speed] to [T], [ISO] to [A] and [Exposure Compensation] to [C].	V1.01
Z CAM	E2	V	-	-	V	V	-	V	-	J	-	1	-	V	-	-	-	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Type-C Model: LN-UCUS-A01	1. Click [MENU], select [connect] and set [USB] to [serial]; Set [serial] to [controller].	V0.93
Sigma	FP	1	$\checkmark$	1	1	$\checkmark$	-	-	-	-	-	-	-	-	-	-	-	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Type-C Model: LN-UCUS-A01		V2.00
BMD	bmpcc 4K	V	-	-	V	$\checkmark$	$\checkmark$	V	$\checkmark$	V	V	1	$\checkmark$	V	-	-	$\checkmark$	HDMI Mini to HDMI TYPE AModel:LN-HAHB-A04	Type-C to Type-C Model: LN-UCUS-A01		V6.9.1
טואם	bmpcc 6K	1	-	-	1	$\checkmark$	$\checkmark$	1	$\checkmark$	1	V	1	$\checkmark$	V	-	-	1	HDMI Mini to HDMI TYPE AModel:LN-HAHB-A04	Type-C to Type-C Model: LN-UCUS-A01		V6.9.1

### Note:

1. LCD display of Sony cameras will go black during playback.

2. When image quality of Sony cameras is set to [RAW] or [RAW+JPEG], in M, A, S, P mode, digital zoom of non-electronic lens is unavailable (please refer to camera manual for specific usage).

3. When connecting camera control cable and HDMI cable to Panasonic GH5, GH5s and S1, the LCD display of these cameras will go black. Live preview on both phone and camera is unavailable for the cameras mentioned.

4. Conditioned by the Canon camera system, LCD display of Canon 80D/6D2/6D/5DS/5DSR will go black for there is no HDMI output setting. Live preview on both phone and camera is unavailable for the cameras mentioned.

5. LCD display of Sony cameras will go blank when [File Format] setting is set to [XAVC S 4K] (please refer to camera manual for specific usage).

6. Please use the transmitter with phones or tablets that support 5GHz band as the transmitter adopts 5GHz WiFi technology.

7. 富士X-T3和X-T4相机在拍照模式时,当相机与图传发射器、WEEBILL-S稳定器连接后,相机机身调参控制按键会失效,仅可通过稳定器手柄按键控制调参。可单击稳定器手柄LV键,恢复相机机身按键控制功能,再次单击LV键,切换至稳定器手柄按键 控制功能。录像档位切拍照档位应先切换档位后单击LV键,拍照档位切录像档位应先单击LV键后切换档位,以实现FUJIFILM X-T3连接稳定器后进行拍照档位和录像档位之间的切换。互连时需要注意以下开机顺序:1.稳定器开机;2.鳞甲图传发射机开 机;3.相机开机。