

# TransMount Image Transmission Transmitter 2.0

## Camera Compatibility List

ZHIYUN

V1.30

Camera Brand	Camera Model	Image Transmission	Photo		Video		Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Electronic Zoom	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus	HDMI Cable Type	Camera Control Cable Type	Camera Settings	Camera Firmware Version
			Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode							
Sony	α9	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Multi USB Model: LN-UCUS-A02	1. Set [HDMI Resolution] in [HDMI Settings] to [1080P]. 2. Set [HDMI Info. Display] in [HDMI Settings] to [Off] to get live preview image both on camera screen and your phone via the transmitter. 3. It is recommended to set [Auto Review] to [Off]. 4. Set the USB connection as "auto" or "mass storage" to visit the photo album via ZY PLAY.	V6.00
	α9M2	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V2.00
	α7R4	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V1.20
	α7R3	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V3.01
	α7M3	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V3.10
	α7R2	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V4.01
	α7S2	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V3.01
	α6600	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V1.00
	α6500	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V1.06
	α6400	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V2.00
	α6300	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V2.01
	α6100	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-	V1.00			
α7S3	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Multi USB Model: LN-UCUS-A02		V1.01	
α7M4	√	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Multi USB Model: LN-UCUS-A02		V1.10	
Sony	α9	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	-	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Micro USB Model: LN-MBUC-A01	1. Set the USB connection as "PC remote control" or enable the PC remote control to adjust the parameter of the camera. 2. Set [HDMI Resolution] in [HDMI Settings] to [1080P]. 3. Set [HDMI Info. Display] in [HDMI Settings] to [Off] to get live preview image both on camera screen and your phone via the transmitter. 4. It is recommended to set [Auto Review] to [Off].	V5.00
	α7R4	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	-				V1.00
	α7R2	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	-				V3.01
	α7M2	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	-				V4.00
	α7S2	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	-			V3.00	
α7S3	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Micro USB Model: LN-MBUC-A01		V1.01	
Panasonic	GH5	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Type-C Model: LN-UCUC-A02	1. Please choose PC (Tether) for your camera's USB mode. 2. Please apply electronic follow focus function in MF mode of the lens. 3. It is recommended to set [Auto Review] and [Duration Time (photo)] to [Off].	V2.6
	GH5S	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√				V1.6
	S1	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√				V1.3
	S1H	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√			V1.0	
DC-BGH1	√	-	-	√	√	-	√	-	√	-	√	-	√	-	-	√	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Type-C Model: LN-UCUC-A02		V1.0	

Camera Brand	Camera Model	Image Transmission	Photo		Video		Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Electronic Zoom	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus	HDMI Cable Type	Camera Control Cable Type	Camera Settings	Camera Firmware Version
			Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode							
Canon	5D3	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Mini USB Model: LN-NBUC-A01	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. Set [HDMI Output + LCD] to [Mirroring] to get live preview image both on camera screen and your phone via the transmitter.</li> <li>3. The camera must stay in live view mode when applying image transmission feature.</li> <li>4. It is recommended to set [Image confirmation] to [Off].</li> </ol>	V1.3.5
Canon	5D4	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Micro USB Model: LN-MBUC-A01	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. When the camera is in Video mode, select HDMI display &gt;Camera + Monitor to get live preview image both on camera screen and your phone via the transmitter.</li> <li>4. The camera must stay in live view mode when applying image transmission feature.</li> <li>5. It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.0.4
	5DS	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Micro USB Model: LN-MBUC-A01	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. The camera must stay in live view mode when applying image transmission feature.</li> <li>4. It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.1.1
	5DS R	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√		Type-C to Micro USB Model: LN-MBUC-A01	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. The camera must stay in live view mode when applying image transmission feature.</li> <li>4. It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.1.2R

Camera Brand	Camera Model	Image Transmission	Photo		Video		Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Electronic Zoom	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus	HDMI Cable Type	Camera Control Cable Type	Camera Settings	Camera Firmware Version
			Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode							
Canon	6D	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Mini USB Model: LN-NBUC-A01	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. The camera must stay in live view mode when applying image transmission feature.</li> <li>3. It is recommended to set [image confirmation] to [Off].</li> </ol>	V1.1.8
	6D2	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Mini USB Model: LN-NBUC-A01	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. The camera must stay in live view mode when applying image transmission feature.</li> <li>4. It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.0.4
	80D	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Mini USB Model: LN-NBUC-A01	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. The camera must stay in live view mode when applying image transmission feature.</li> <li>4. It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.0.2
	90D	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Mini USB Model: LN-NBUC-A01	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. The camera must stay in live view mode when applying image transmission feature.</li> <li>4. It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.1.1

Camera Brand	Camera Model	Image Transmission	Photo		Video		Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Electronic Zoom	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus	HDMI Cable Type	Camera Control Cable Type	Camera Settings	Camera Firmware Version
			Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode							
Canon	EOS R	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Type-C Model: LN-UCUC-A02	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. When the camera is in Video mode, select HDMI display &gt;Camera + Monitor to get live preview image both on camera screen and your phone via the transmitter.</li> <li>4. It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.3.0
	EOS R5	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Type-C Model: LN-UCUC-A02	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. When the camera is in Video mode, select HDMI display &gt;Camera + Monitor to get live preview image both on camera screen and your phone via the transmitter.</li> <li>4. It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.1.1
	EOS R6	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Type-C Model: LN-UCUC-A02	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. When the camera is in Video mode, select HDMI display &gt;Camera + Monitor to get live preview image both on camera screen and your phone via the transmitter.</li> <li>4. It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.1.1

Camera Brand	Camera Model	Image Transmission	Photo		Video		Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Electronic Zoom	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus	HDMI Cable Type	Camera Control Cable Type	Camera Settings	Camera Firmware Version
			Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode							
Canon	EOS RP	√	√	√	√	√	√	√	-	-	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Type-C Model: LN-UCUC-A02	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens.</li> <li>2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode.</li> <li>3. Set [HDMI info disp] to [Clean / 4K output] or [Clean / FHD output]] to get live preview image both on camera screen and your phone via the transmitter.</li> <li>4. It is recommended to set [Image Confirmation] to [Off].</li> </ol>	V1.3.0
Nikon	D850	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Micro USB Model: LN-MBUC-A01	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in M/A mode of the lens and AF-S or AF-C mode of autofocus mode.</li> <li>2. Set [Output Resolution] of camera [HDMI] to [1080P].</li> <li>3. The camera must stay in live view mode when applying image transmission feature.</li> <li>4. It is recommended to set [Image Review] to [Off].</li> </ol>	V1.02
Nikon	Z5	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Mini Model:LN-HBHB-A03	Type-C to Type-C Model: LN-UCUC-A02	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in M/A mode of the lens and AF-S or AF-C mode of autofocus mode.</li> <li>2. Set [Output Resolution] of camera [HDMI] to [1080P].</li> <li>3. It is recommended to set [Image Review] to [Off].</li> <li>4. Due to the setting of the camera system, when the frame frequency is 100p/120p/slow motion, HDMI output is not available.</li> </ol>	V1.00
	Z6	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√				V2.01
	Z6 II	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√				V1.00
	Z7	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√				V2.01
	Z50	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Micro USB Model: LN-MBUC-A01	<ol style="list-style-type: none"> <li>5. Due to the setting of the camera system, when N-Log/HDR(HLG) is enabled, the video shooting in camera cannot be controlled.</li> </ol>	V1.00

Camera Brand	Camera Model	Image Transmission	Photo		Video		Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Electronic Zoom	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus	HDMI Cable Type	Camera Control Cable Type	Camera Settings	Camera Firmware Version
			Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode							
FUJIFILM	XT3	√	√	√	√	√	√	√	-	-	√	√	√	√	-	√	√	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Type-C Model: LN-UCUC-A02	1. Set [connection mode] in [connection setting] to [USB AUTO]; 2. Click [button/dial setting] in [setting] and select [command] for [ISO dial setting (A)]; Select [command] for [aperture ring setting (A)]	V3.10
	XT4	√	√	√	√	√	√	√	-	-	√	√	√	√	-	√	√			3. When using the camera for photo taking, click [power management] in camera setting and select [boost] for [performance]; 4. When using the camera for video taking, set [shutter speed] to [T], [ISO] to [A] and [Exposure Compensation] to [C].	V1.01
Z CAM	E2	√	-	-	√	√	-	√	-	√	-	√	-	√	-	-	-	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Type-C Model: LN-UCUC-A02	1. Click [MENU], select [connect] and set [USB] to [serial]; Set [serial] to [controller].	V0.93
Sigma	FP	√	√	√	√	√	-	-	-	-	-	-	-	-	-	-	-	HDMI Mini to HDMI Micro Model:LN-HBHC-A03	Type-C to Type-C Model: LN-UCUC-A02		V2.00
BMD	bmpcc 4K	√	-	-	√	√	√	√	√	√	√	√	√	√	-	-	√	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Type-C Model: LN-UCUC-A02		V6.9.1
	bmpcc 6K	√	-	-	√	√	√	√	√	√	√	√	√	√	-	-	√	HDMI Mini to HDMI TYPE A Model:LN-HAHB-A04	Type-C to Type-C Model: LN-UCUC-A02		V6.9.1

**Note:**

- LCD display of Sony cameras will go black during playback.
- When image quality of Sony cameras is set to [RAW] or [RAW+JPEG], in M, A, S, P mode, digital zoom of non-electronic lens is unavailable (please refer to camera manual for specific usage).
- When connecting camera control cable and HDMI cable to Panasonic GH5, GH5s and S1, the LCD display of these cameras will go black. Live preview on both phone and camera is unavailable for the cameras mentioned.
- Conditioned by the Canon camera system, LCD display of Canon 80D/6D2/6D/5DS/5DSR will go black for there is no HDMI output setting. Live preview on both phone and camera is unavailable for the cameras mentioned.
- LCD display of Sony cameras will go blank when [File Format] setting is set to [XAVC S 4K] (please refer to camera manual for specific usage).
- Please use the transmitter with phones or tablets that support 5GHz band as the transmitter adopts 5GHz WIFI technology.
- In Photo mode of Fujifilm X-T3&X-T4, when the camera is connected with the transmitter and the WEEBILL-S stabilizer, camera parameter control from camera is disabled and you can only adjust camera parameter via stabilizer. Click LV button of stabilizer to resume camera parameter control and click again to return to stabilizer control; single click LV button before switching the camera from Photo mode to Video mode; Single click LV button after switching the camera from Video mode to Photo mode. Power on stabilizer, transmitter and camera in the following order: 1. stabilizer; 2. transmitter; 3. camera.