

CRANE 3S Camera Compatibility List



V 4.40

This model is an early product, and its features have been improved to a great extent. Therefore, firmware updates for this model will no longer be carried out, and compatibility with all new camera models will also be discontinued.
Last update date: October 13, 2023

| Camera Model | Photo | | Video | | Live Preview | Shutter Speed Adjustment | | Aperture Adjustment | | ISO Adjustment | | EV Adjustment | | Electronic Zoom | Halfway Press Shutter Button to Autofocus | Electronic Follow Focus(Focus Wheel) | Camera Control Cable Type | Camera Firmware Version | Note |
|--------------|-------|----------|-------|----------|--------------|--------------------------|------------|---------------------|------------|----------------|------------|---------------|------------|-----------------|---|--------------------------------------|--|-------------------------|---|
| | Save | Playback | Save | Playback | | Photo Mode | Video Mode | Photo Mode | Video Mode | Photo Mode | Video Mode | Photo Mode | Video Mode | | | | | | |
| Sony a9 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Micro USB | V6.00 | 1. Please select "PC Remote" for your camera's "USB Connection". 2. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode" |
| | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V6.00 | |
| Sony a9 II | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C USB to Type-C USB | V2.00 | 1. Please select "PC Remote" for your camera's "USB Connection". (To open a7s3 PC remote control, go to "Menu" and do the following selection : "Network" - "Transfer / Remote" - "PC remote control" - "Open") |
| | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V2.00 | |
| Sony a7R5 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C USB to Multi USB | V1.00 | |
| | √ | √ | - | - | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C / Type-C to Micro USB | | |
| Sony a7R4 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C USB to Type-C USB | V1.20 | |
| | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V1.20 | |
| Sony a7R3 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V3.01 | |
| Sony a7M3 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V3.10 | |
| Sony a7S3 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V1.01 | |
| Sony a7R2 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V4.00 | |
| Sony a7S2 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V3.00 | |
| Sony a6600 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V1.00 | |
| Sony a6500 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V1.06 | |
| Sony a6400 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V2.00 | |
| Sony a6300 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V2.01 | |
| Sony a6100 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V1.00 | |
| Sony a7S3 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Micro USB / Type-C to Type-C USB | V1.01 | |
| Sony A7C | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.00 | |



| Camera Model | Photo | | Video | | Live Preview | Shutter Speed Adjustment | | Aperture Adjustment | | ISO Adjustment | | EV Adjustment | | Electronic Zoom | Halfway Press Shutter Button to Autofocus | Electronic Follow Focus(Focus Wheel) | Camera Control Cable Type | Camera Firmware Version | Note |
|---------------|-------|----------|-------|----------|--------------|--------------------------|------------|---------------------|------------|----------------|------------|---------------|------------|-----------------|---|--------------------------------------|--|-------------------------|---|
| | Save | Playback | Save | Playback | | Photo Mode | Video Mode | Photo Mode | Video Mode | Photo Mode | Video Mode | Photo Mode | Video Mode | | | | | | |
| Sony A1 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB / Type-C to Micro USB | V1.10 | 1. Please select "PC Remote" for your camera's "USB Connection". 2. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode" |
| | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V1.10 | 1. Please select "PC Remote" for your camera's "USB Connection". 2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG". |
| Sony ILME-FX3 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | V1.00 | 1. Please select "PC Remote" for your camera's "USB Connection". 2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG". |
| | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Micro USB | V1.00 | 1. Please select "PC Remote" for your camera's "USB Connection". 2. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode" |
| Sony FX30 | √ | √ | - | - | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.00 | 1. Please select "PC Remote" for your camera's "USB Connection". 2. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode" |
| | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | - | - | - | Type-C to Multi USB | V1.00 | 1. Please select "PC Remote" for your camera's "USB Connection". 2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG". |
| Sony α7M4 | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | √ | - | - | Type-C to Multi USB | v1.0 | 1. Please select "PC Remote" for your camera's "USB Connection". 2. For Sony cameras, after connecting the gimbal and camera with the control cable, Please first power on the gimbal and then the camera. Make sure the camera has sufficient power to operate. 3. When shooting panorama or timelapse, it's recommended to turn off auto review in the Sony camera. |
| | √ | √ | - | - | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C / Type-C to Micro USB | v1.0 | 1. Please select "PC Remote" for your camera's "USB Connection". 2. For Sony cameras, after connecting the gimbal and camera with the control cable, Please first power on the gimbal and then the camera. Make sure the camera has sufficient power to operate. 3. When shooting panorama or timelapse, it's recommended to turn off auto review in the Sony camera. 4. To charge the camera, please use a Type-C to Type-C camera control cable. |
| Sony ZV-E1 | √ | √ | - | - | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.00 | 1. Please select "PC Remote" for your camera's "USB Connection". 2. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode" |



| Camera Model | Photo | | Video | | Live Privity | Shutter Speed Adjustment | | Aperture Adjustment | | ISO Adjustment | | EV Adjustment | | Electronic Zoom | Halfway Press Shutter Button to Autofocus | Electronic Follow Focus(Focus Wheel) | Camera Control Cable Type | Camera Firmware Version | Note |
|---------------------|-------|----------|-------|----------|--------------|--------------------------|------------|---------------------|------------|----------------|------------|---------------|------------|-----------------|---|--------------------------------------|---------------------------|-------------------------|--|
| | Save | Playback | Save | Playback | | Photo Mode | Video Mode | Photo Mode | Video Mode | Photo Mode | Video Mode | Photo Mode | Video Mode | | | | | | |
| Panasonic G9 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Micro USB | V2.1 | 1. Please select "PC (Tether)" for your camera's "USB Connection". 2. When using electronic focusing, the camera lens should be in "MF" mode. 3. Before connecting with a control cable, please first turn off the USB Power Supply in camera settings. 4. When shooting Panorama or Timelapse, it is recommended to turn off auto review and duration time(photo) in the Panasonic camera. |
| Panasonic GH5 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V2.6 | |
| Panasonic GH5S | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.6 | |
| Panasonic S1 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | - | √ | Type-C to Type-C USB | V1.3 | |
| Panasonic S5 | √ | √ | √ | √ | - | √ | - | - | - | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.0 | |
| Panasonic S5 II | √ | √ | √ | √ | - | √ | - | - | - | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.00 | |
| Panasonic GH6 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.2 | |
| Panasonic S1H | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | - | √ | Type-C to Type-C USB | V1.0 | |
| Panasonic DC-BGH1 | - | - | √ | √ | - | - | √ | - | √ | - | √ | - | √ | - | - | √ | Type-C to Type-C USB | V1.0 | |
| Canon 1DX2 | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ (See Note 5) | √ | Type-C to Micro USB | V1.0.2 | 1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera 2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF". 3. When shooting panorama or timelapse, it's recommended to turn off auto review in the Sony camera. 1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera 2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF". |
| Canon 1DX3 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ (See Note 5) | √ | Type-C to Type-C USB | v1.1.0 | |
| Canon 5D3 | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ (See Note 5) | √ | Type-C to Mini USB | V1.3.5 | |
| Canon 5D4 | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ (See Note 5) | √ | Type-C to Micro USB | V1.0.4 | |
| Canon 5DS | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ (See Note 5) | √ | Type-C to Micro USB | V1.1.1 | |
| Canon 5DS R | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ (See Note 5) | √ | Type-C to Micro USB | V1.1.2R | |
| Canon 6D | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ (See Note 5) | √ | Type-C to Mini USB | V1.1.8 | |
| Canon 6D2 | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ (See Note 5) | √ | Type-C to Mini USB | V1.0.4 | |
| Canon 80D | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ (See Note 5) | √ | Type-C to Mini USB | V1.0.2 | |
| Canon 90D | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ (See Note 5) | √ | Type-C to Micro USB | V1.1.1 | |
| Canon EOS R5 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | - | √ | Type-C to Type-C USB | V1.1.1 | |
| Canon EOS R5C | √ | √ | √ | √ | - | √ | - | √ | - | √ | - | √ | - | - | √ | √ | Type-C to Type-C USB | V1.0.1 | |
| Canon EOS R6 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | - | √ | Type-C to Type-C USB | V1.1.1 | |
| Canon EOS R7 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C USB to Type-C USB | V1.0.1 | |
| Canon EOS R10 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C USB to Type-C USB | V1.0.1 | |
| Canon EOS R | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | - | √ | Type-C to Type-C USB | V1.6.0 | |
| Canon EOS RP | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | - | √ | Type-C to Type-C USB | V1.4.0 | |
| Canon EOS C70 | - | - | √ | √ | - | - | - | - | - | - | - | - | - | - | - | √ | Type-C to Type-C USB | V1.0.0.1 | |
| Canon EOS M6 Mark 2 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.10 | |



| Camera Model | Photo | | Video | | Live Preview | Shutter Speed Adjustment | | Aperture Adjustment | | ISO Adjustment | | EV Adjustment | | Electronic Zoom | Halfway Press Shutter Button to Autofocus | Electronic Follow Focus(Focus Wheel) | Camera Control Cable Type | Camera Firmware Version | Note |
|----------------------|-------|----------|-------|----------|--------------|--------------------------|------------|---------------------|------------|----------------|------------|---------------|------------|-----------------|---|--------------------------------------|----------------------------------|-------------------------|--|
| | Save | Playback | Save | Playback | | Photo Mode | Video Mode | Photo Mode | Video Mode | Photo Mode | Video Mode | Photo Mode | Video Mode | | | | | | |
| Canon 800D | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Mini USB | V1.0.1 | 1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera 2. If using electronic focusing when recording a video, please "Disable" the " Movie Servo AF ". |
| Canon 850D | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Micro USB | V1.0.1 | |
| Canon EOS R6 Mark II | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.0.0 | |
| Canon EOS R8 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.0.0 | |
| Canon EOS R8 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.0.0 | |
| Canon EOS R3 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB LN-UCUC-A02 | V1.2.1 | |
| Nikon D850 | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Micro USB | V1.11 | 1. When using electronic focusing, the lens should be in A(AF) mode, and the focus mode should be AF-S or AF-C. 2. Nikon cameras don't support electronic focusing when recording. 3. When shooting panorama or timelapse, it's recommended to turn off image review in the Nikon camera to reduce system latency. |
| Nikon D780 | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Micro USB | V1.01 | |
| Nikon Z9 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.0 | |
| Nikon Z5 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.00 | |
| Nikon Z6 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V3.00 | |
| Nikon Z6 II | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V1.00 | |
| Nikon Z7 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V2.00 | |
| Nikon Z7 II | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V2.00 | |
| Nikon Z50 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Micro USB | V1.00 | |
| Nikon Z30 | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C USB to Type-C USB | V1.0.0 | 1. When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode. 2. Nikon cameras don't support electronic focusing when recording. 3. When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency. |
| Nikon Zfc | √ | √ | √ | √ | - | - | - | √ | √ | - | - | - | - | - | √ | √ | Type-C to Type-C USB | V1.00 | |
| Nikon Zf | √ | √ | √ | √ | - | - | - | √ | √ | - | - | - | - | - | √ | - | Type-C to Type-C USB LN-UCUC-A02 | V1.00 | |
| OLYMPUS E-m1II | √ | √ | √ | √ | - | √ | √ | √ | √ | √ | √ | √ | √ | - | √ | √ | Type-C to Type-C USB | V3.1 | |
| FUJIFILM X-T3 | √ | √ | √ | √ | - | √ | - | - | - | √ | √ | √ | - | - | √ | - | Type-C to Type-C USB | V3.21 | 1. In Connection Setting, set " CONNECTION MODE" into "USB TETHER SHOOTING AUTO". |
| FUJIFILM X-T4 | √ | √ | √ | √ | - | √ | - | - | - | √ | √ | √ | - | - | √ | - | Type-C to Type-C USB | V1.01 | |
| FUJIFILM X-T5 | √ | √ | √ | √ | - | √ | - | - | - | √ | √ | √ | √ | - | √ | - | Type-C to Type-C | V1.00 | |
| FUJIFILM X-T30 | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | Type-C to Type-C USB | V1.30 | When connecting the camera to the gimbal, please power on the gimbal first and connect the camera control cables before powering on the camera. |
| FUJIFILM X-H2S | √ | √ | √ | √ | - | √ | - | - | - | √ | √ | √ | √ | - | √ | - | Type-C USB to Type-C USB | V1.0.0 | |



| Camera Model | Photo | | Video | | Live Preview | Shutter Speed Adjustment | | Aperture Adjustment | | ISO Adjustment | | EV Adjustment | | Electronic Zoom | Halfway Press Shutter Button to Autofocus | Electronic Follow Focus(Focus Wheel) | Camera Control Cable Type | Camera Firmware Version | Note |
|----------------|-------|----------|-------|----------|--------------|--------------------------|------------|---------------------|------------|----------------|------------|---------------|------------|-----------------|---|--------------------------------------|----------------------------------|-------------------------|---|
| | Save | Playback | Save | Playback | | Photo Mode | Video Mode | Photo Mode | Video Mode | Photo Mode | Video Mode | Photo Mode | Video Mode | | | | | | |
| Fujifilm X-S20 | √ | √ | √ | √ | - | √ | - | - | - | √ | √ | - | - | - | √ | - | Type-C to Type-C USB | V1.00 | 1. Please set the "connection mode" into "USB TETHER shooting auto" for camera connection settings. 2. Fujifilm doesn't support saving photos in RAW format. |
| Sigma fp | √ | √ | √ | √ | - | - | - | - | - | - | - | - | - | - | √ | - | Type-C to Type-C USB | V2.00 | |
| BMPCC 4K | - | - | √ | √ | - | √ | √ | √ | √ | √ | √ | - | - | - | - | √ | Type-C to Type-C USB | V7.3 | |
| BMPCC 6K | - | - | √ | √ | - | √ | √ | √ | √ | √ | √ | - | - | - | - | √ | Type-C to Type-C USB | V7.3 | |
| BMPCC 6K PRO | - | - | √ | √ | - | √ | √ | √ | √ | √ | √ | - | - | - | - | √ | Type-C to Type-C USB | V7.3.1 | |
| ZCAM E2 | - | - | √ | √ | - | - | - | - | √ | - | √ | - | - | - | - | - | Type-C to Type-C USB | V0.98.0 | 1. Click [MENU], select [connect] and set [USB] to [serial]; Set [serial] to [controller]. |
| ZCAM E2 | - | - | √ | √ | - | - | - | - | √ | - | √ | - | - | - | - | - | Type-C to Type-C USB | V0.95 | |
| ZCAM E2 F6 | - | - | √ | √ | - | - | - | - | √ | - | √ | - | - | - | - | - | Type-C to Type-C USB | V0.95 | |
| Canon C200 | - | - | √ | √ | - | - | - | - | - | - | - | - | - | - | - | - | Type-C to φ2.5mm Plug (optional) | V1.0.2.1.00 | Select "RC-V100(REMOTE A)" for the remote control connector in System Settings |
| Canon C300 | - | - | √ | √ | - | - | - | - | - | - | - | - | - | - | - | - | Type-C to φ2.5mm Plug (optional) | V1.1.0.1.00 | |
| Sony FS5 | - | - | √ | √ | - | - | - | - | - | - | - | - | - | - | - | - | Type-C to φ2.5mm Plug (optional) | V1.01 | |
| Sony FS7M2 | - | - | √ | √ | - | - | - | - | - | - | - | - | - | - | - | - | Type-C to φ2.5mm Plug (optional) | V1.22 | |
| Sony FX9 | - | - | √ | √ | - | - | - | - | - | - | - | - | - | - | - | - | Type-C to φ2.5mm Plug (optional) | | |
| Sony Z280 | - | - | √ | √ | - | - | - | - | - | - | - | - | - | - | - | - | Type-C to φ2.5mm Plug (optional) | V1.10 | |

Note:

- This table will be updated in line with firmware update and is subject to change without prior notice;
- For Sony cameras, after connecting stabilizer and camera with control cable, Please first power on the stabilizer and then the camera. Make sure the camera has sufficient power to operate. Optical zoom control is available on the stabilizer when used with motorized lens. Digital zoom control is available on the stabilizer when used with non-motorized lens. Please select zoom option in your camera's settings;
- With Panasonic cameras, please choose PC (Tether) for your camera's USB mode;
- When shooting Panorama or TimeLapse, it is recommended to turn off the camera's auto review (Sony), image confirmation (Canon), image review (Nikon) to reduce system latency.
- The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.
- Before connecting Panasonic G9 with a control cable, please first turn off the USB Power Supply in camera settings.
- When connecting an Olympus camera to the stabilizer, USB Mode will automatically pops up on the camera. Please select [] (PC (Tether)) and dial the mode to P, A, S, or M mode.
- In Photo mode of Fujifilm, camera parameter control from camera is disabled and you can only adjust camera parameter via stabilizer. Press LV button of stabilizer to resume parameter control of your camera and press LV button again to return to stabilizer control; Fujifilm doesn't support saving photos in RAW format.
- The "Real-time Preview" feature is for user to switch between electronic viewfinder and optical viewfinder in DSLR by single-clicking the LV button of the stabilizer.
- For Canon mirrorless cameras, switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. Please turn off your camera before switching modes. For EOS R/RP/R5/R6, shutter release can't be used to control video shooting in photo mode otherwise the camera may freeze. (In this case please take out the camera batteries and reinstall and turn on the camera again)
- "√" means the camera can realize the function after connecting to the stabilizer; "x" means the camera currently cannot realize the function after connecting to the stabilizer, but there're possibilities that the function may open by a firmware update or other ways. "-" means the uncontrollable functions after connecting to the stabilizer is because the camera control protocol is not opened.

| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|---|----------------------------|--|--------------------|---------------------|---|---|
| Canon | 1D X Mark II, 1D X Mark III (Without Backing Base) 5DS, 5DS R, 5D Mark IV, 5D Mark III, 6D Mark II, 6D, 90D, 80D, 800D, 850D; | EF 8-15mm f/4L USM | Camera and Lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | EF 11-24mm f/4L USM | Camera and Lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | EF 16-35mm f/4L IS USM | Camera and Lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | EF 16-35mm f/2.8L III USM | Camera and Lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | EF 17-40mm f/4L USM | Camera and Lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | EF 24-70mm f/2.8L II USM | Camera and Lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | EF 24-70mm f/4L IS USM | Camera and Lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | EF 24-105mm f/4L IS II USM | Camera and Lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|---|--------------------------------|--|--------------------|---------------------|---|---|
| Canon | 1D X Mark II, 1D X Mark III (Without Backing Base) 5DS, 5DS R, 5D Mark IV, 5D Mark III, 6D Mark II, 6D, 90D, 80D, 800D, 850D; | EF 24-105mm f/3.5-5.6 IS STM | Camera and Lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | EF 24mm f/1.4L II USM | Camera and Lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | EF 35mm f/1.4L II USM | Camera and Lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | EF 50mm f/1.2L USM | Camera and Lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | EF 50mm f/1.4 USM | Camera and Lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | EF 50mm f/1.8 STM | Camera and Lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | EF 85mm f/1.2L II USM | Camera and Lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | EF 85mm f/1.4L IS USM | Camera and Lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | EF 85mm f/1.8 USM | Camera and Lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Sigma 24-70mm f/2.8 DG HSM Art | Camera and Lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | Sigma 35mm f/1.4 DG HSM Art | Camera and Lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Sigma 50mm f/1.4 DG HSM Art | Camera and Lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|---|----------------------------|--|--------------------|---------------------|---|---|
| Canon | EOS R, EOS R5, EOS R5C, EOS R6, EOS R7, EOS R10, EOS RP, EOS C70, EOS R6 Mark II, EOS R8, EOS R50, EOS R3 (Non-RF lens should use EF-EOS R lens adapter) | EF 8-15mm f/4L USM | Camera and Lens | √ | - | | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | EF 11-24mm f/4L USM | Camera and Lens | √ | √ | | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | EF 16-35mm f/4L IS USM | Camera and Lens | √ | - | | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | EF 16-35mm f/2.8L III USM | Camera and Lens | √ | - | | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | EF 17-40mm f/4L USM | Camera and Lens | √ | - | | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | EF 24-70mm f/2.8L II USM | Camera and Lens | √ | √ | | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | EF 24-70mm f/4L IS USM | Camera and Lens | √ | √ | | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | EF 24-105mm f/4L IS II USM | Camera and Lens | √ | √ | | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|---|--------------------------------|--|--------------------|---------------------|---|---|
| Canon | EOS R, EOS R5, EOS R5C, EOS R6, EOS R7, EOS R10, EOS RP, EOS C70, EOS R6 Mark II, EOS R8, EOS R50, EOS R3 (Non-RF lens should use EF-EOS R lens adapter) | EF 24-105mm f/3.5-5.6 IS STM | Camera and Lens | √ | √ | | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length, Do not remove eyepiece cap |
| | | EF 24mm f/1.4L II USM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | EF 35mm f/1.4L II USM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | EF 50mm f/1.2L USM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | EF 50mm f/1.4 USM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | EF 50mm f/1.8 STM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | | Do not remove eyepiece cap |
| | | EF 85mm f/1.2L II USM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | | Do not remove eyepiece cap |
| | | EF 85mm f/1.4L IS USM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | | Do not remove eyepiece cap |
| | | EF 85mm f/1.8 USM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | Sigma 24-70mm f/2.8 DG HSM Art | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | | Do not remove eyepiece cap |
| | | Sigma 35mm f/1.4 DG HSM Art | Camera and Lens | √ | - | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | Sigma 50mm f/1.4 DG HSM Art | Camera and Lens | √ | - | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | RF15-35mm f/2.8 L IS USM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |

| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|---|---------------------------------------|--|--------------------|---------------------|---|---|
| Canon | EOS R, EOS R5, EOS R5C, EOS R6, EOS R7, EOS R10, EOS RP, EOS C70, EOS R6 Mark II, EOS R8, EOS R50, EOS R3 (Non-RF lens should use EF-EOS R lens adapter) | RF24-70mm f/2.8 L IS USM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | RF24-105mm F4 L IS USM | Camera and Lens | √ | - | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | RF28-70mm F2 L | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | RF35mm F1.8 | Camera and Lens | √ | - | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | - | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | RF50mm F1.2 L USM | Camera and Lens | √ | - | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | - | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| | | RF85mm F1.2 L USM | Camera and Lens | √ | √ | | Do not remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Do not remove eyepiece cap |
| Nikon | D850, D810, D780, D750, D610, D7500; | AF-S NIKKOR 14-24mm f/2.8G ED | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 16-35mm f/4G ED VR | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S Zoom-NIKKOR 17-35mm f/2.8D IF-ED | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--|---------------------------------|---------------------------------------|--|---|--------------------------------|---|---|
| Nikon | D850、D810、D780、D750、D610、D7500; | AF-S NIKKOR 18-35mm f/3.5-4.5G ED | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 24-70mm f/2.8E ED VR | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 24-70mm f/2.8G ED | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF Zoom-NIKKOR 24-85mm f/2.8-4D IF | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 24-85mm f/3.5-4.5G ED VR | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 24-120mm f/4G ED VR | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 28-300mm f/3.5-5.6G ED VR | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF NIKKOR 14mm f/2.8D ED | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 20mm f/1.8G ED | Camera and lens | √ | - | | No need to remove eyepiece cap |
| Camera, Lens and Servo Motor (For Focus Control) | √ | | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap | | |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|--|--|--|--------------------|---|---|---|
| Nikon | D850, D810, D780, D750, D610, D7500; | AF-S NIKKOR 24mm f/1.4G ED | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 24mm f/1.8G ED | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 35mm f/1.4G | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 50mm f/1.4G | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 85mm f/1.4G | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 85mm f/1.8G | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Sigma 24 70mm f/2.8L DG | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | Sigma 35mm F1.4 DG | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | Sigma 50mm F1.4 DG | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | Z5, Z6, Z6 II, Z7, Z7 II, Zfc, Z9, Z30 | NIKKOR Z 24-70mm f/2.8S | Camera and lens | √ | - | |
| | Camera, Lens and Servo Motor (For Focus Control) | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | Camera, Lens and Servo Motor (For Zoom Control) | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | NIKKOR Z 24-70mm f/4S | | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | NIKKOR Z 35mm f/1.8S | | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap | |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|--|---------------------------------------|--|--------------------|---------------------|---|---|
| Nikon | Z5, Z6, Z6 II, Z7, Z7 II, Zfc, Zf, Z9, Z30 | NIKKOR Z 50mm f/1.8S | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 14-24mm f/2.8G ED | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 16-35mm f/4G ED VR | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S Zoom-NIKKOR 17-35mm f/2.8D IF-ED | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 18-35mm f/3.5-4.5G ED | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 24-70mm f/2.8E ED VR | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 24-70mm f/2.8G ED | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF Zoom-NIKKOR 24-85mm f/2.8-4D IF | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 24-85mm f/3.5-4.5G ED VR | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|------------------------------------|---------------------------------------|--|--------------------|---------------------|---|---|
| Nikon | Z5、Z6、Z6 II、Z7、Z7 II、Zfc、Zf、Z9、Z30 | AF-S NIKKOR 24-120mm f/4G ED VR | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF-S NIKKOR 28-300mm f/3.5-5.6G ED VR | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | AF NIKKOR 14mm f/2.8D ED | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 20mm f/1.8G ED | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 24mm f/1.4G ED | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 24mm f/1.8G ED | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 35mm f/1.4G | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 50mm f/1.4G | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 85mm f/1.4G | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | AF-S NIKKOR 85mm f/1.8G | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Sigma 24-70mm f/2.8L DG | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Zoom Control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | Sigma 35mm F1.4 DG | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Sigma 50mm F1.4 DG | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, Lens and Servo Motor (For Focus Control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|---|-----------------------------|--|--------------------|---------------------|---|---|
| Sony | A9, A9 II, A7S3, A7C, A7R5, A7R4, A7R3, A7M3, A7R2, A7M2, A7M4, A7S2, A6600, A6500, A6400, A6300, A6100, A6000, ILME-FX3, FX30, A1, ZV-E1; | FE 16-35mm F2.8 GM | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | FE 16-35mm F4 ZAISS | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | FE 12-24mm F4 G | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | FE 24mm f1.4GM | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | FE 24-70mm F2.8 GM | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | FE 24-70mm F4 ZA OSS | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | FE 28mm F2 | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | FE 50mm F1.8 | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | FE 85mm F1.4 GM | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | FE 85mm F1.8 | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Distagon T* FE 35mm F1.4 ZA | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|---|-----------------------------|--|--------------------|---------------------|---|---|
| Sony | A9, A9 II, A7S3, A7C, A7R5, A7R4, A7R3, A7M3, A7R2, A7M2, A7M4, A7S2, A6600, A6500, A6400, A6300, A6100, A6000, ILME-FX3, FX30, A1, ZV-E1; | Sonnar T* FE 35mm F2.8 ZA | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Planar T* FE 50mm F1.4 ZA | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Sonnar® T* FE 55mm F1.8 ZA | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | E 10–18mm F4 OSS | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | E 16-70mm F4 ZA OSS | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | E PZ 18–105mm F4 G OSS | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | E 18–200mm F3.5–6.3 OSS LE | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | Sigma 16mm f/1.4 DC DN | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Sigma 24mm f1.4 DG | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Sigma 30mm f/1.4 DC HSM Art | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Sigma 30mm f/1.4 DC DN | Camera and lens | √ | √ | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark | | |
|---|---|--|---|------------------------|--|---|---|---|---|
| Sony | A9, A9 II, A7S3, A7C, A7R5, A7R4, A7R3, A7M3, A7R2, A7M2, A7M4, A7S2, A6600, A6500, A6400, A6300, A6100, A6000, ILME-FX3, FX30, A1, ZV-E1; | sigma 50mm f/1.4 DG | Camera and lens | √ | √ | | No need to remove eyepiece cap | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap | | |
| | | Sigma 56mm F1.4 DC DN | Camera and lens | √ | √ | | No need to remove eyepiece cap | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap | | |
| | | Tamron 28-75mm f/2.8 | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| | | sigma18-35mm f/1.8 DC HSM Art (Canon lens adapter) | Camera and lens | √ | √ | | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; Need to remove eyepiece cap | | |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; Need to remove eyepiece cap | | |
| | | FUJIFILM | X-H1, X-T5, X-T3, X-T2, X-H2S, X-S20 | XF 10-24mm f/4.0 R OIS | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| Camera, lens and servo motor (for zoom control) | √ | | | | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| XF 16-55mm f/2.8 R LM WR | Camera and lens | | | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| | Camera, lens and servo motor (for focus control) | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| | Camera, lens and servo motor (for zoom control) | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| XF 18-55mm f/2.8-4 R OIS | Camera and lens | | | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| | Camera, lens and servo motor (for focus control) | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| | Camera, lens and servo motor (for zoom control) | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| XF 18-135mm f/3.5-5.6 R LM OIS WR | Camera and lens | | | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| | Camera, lens and servo motor (for focus control) | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| | Camera, lens and servo motor (for zoom control) | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap | | |
| XF 35mm f/2 R WR | Camera and lens | | | √ | - | | No need to remove eyepiece cap | | |
| | Camera, lens and servo motor (for focus control) | | | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap | | |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|---|--------------------------------|--|--------------------|---------------------|---|---|
| FUJIFILM | X-H1, X-T5, X-T3, X-T2, X-H2S, X-S20 | XF 56mm f/1.2 R | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | XC 15-45mm f/3.5-5.6 OIS | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | XC 16-50mm f/3.5-5.6 OIS | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | Super EBC XF 23mm f/1.4 R | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| Panasonic | GH5s, GH5, G9, DC-BGH1, GH6 | Vario-Elmarit 8-18mm f/2.8-4.0 | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | Vario 12-35mm f/2.8 II | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | Vario-Elmarit 12-60mm f/2.8-4 | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | SUMMILUX 12mm f/1.4 | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | Lumix G 25mm f/1.7 | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | SUMMILUX 15mm f/1.7 | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |

| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--|--|--|--|--------------------|---------------------|---|---|
| Panasonic | GH5s, GH5, G9, DC-BGH1, GH6 | MACRO 30mm f/2.8 | Camera and lens | √ | - | | No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | No need to remove eyepiece cap |
| | | M.ZUIKO DIGITAL ED 12-40mm f/2.8 PRO | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | M.ZUIKO DIGITAL ED 7-14mm f/2.8 PRO | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | M.Zuiko Digital ED 12-100mm f/4.0 IS PRO | Camera and lens | √ | - | | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | | S1H, S1, S5, S5 II | LUMIX S 24-105mm F/4 Macro OIS | Camera and lens | √ | √ | |
| | Camera, lens and servo motor (for focus control) | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | Camera, lens and servo motor (for zoom control) | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length; No need to remove eyepiece cap |
| | BMD | BMPC4K | Vario-Elmarit 8-18mm f/2.8-4.0 | Camera and lens | √ | - | |
| Camera, lens and servo motor (for focus control) | | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| Camera, lens and servo motor (for zoom control) | | | | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| Vario 12-35mm f/2.8 II | | | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| Vario-Elmarit 12-60mm f/2.8-4 | | | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| SUMMILUX 12mm f/1.4 | | | Camera and lens | √ | - | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark | |
|--------------|------------------------|--|--|--|---------------------|---|---|-------------------------------------|
| BMD | BMPCC 4K | 25mm f/1.7 | Camera and lens | √ | - | | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | | |
| | | SUMMILUX 15mm f/1.7 | Camera and lens | √ | - | | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | | |
| | | MACRO 30mm f/2.8 | Camera and lens | √ | - | | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | | |
| | | M.ZUIKO DIGITAL ED 12-40mm f/2.8 PRO | Camera and lens | √ | - | | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | | M.ZUIKO DIGITAL ED 7-14mm f/2.8 PRO | Camera and lens | √ | - | | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | | M.Zuiko Digital ED 12-100mm f/4.0 IS PRO | Camera and lens | √ | - | | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | | BMPCC 6K, BMPCC 6K PRO | EF 8-15mm f/4L USM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | EF 11-24mm f/4L USM | | Camera and lens | √ | - | | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | EF 16-35mm f/4L IS USM | | Camera and lens | √ | - | | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | EF 16-35mm f/4L IS USM | | Camera and lens | √ | - | | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|-------------------|--|------------------------------|--|---|-------------------------------------|---|-------------------------------------|
| BMD | BMPCC 6K, BMPCC 6K PRO | EF 16-35mm f/2.8L III USM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | EF 17-40mm f/4L USM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | EF 24-70mm f/2.8L II USM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | EF 24-70mm f/4L IS USM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | EF 24-105mm f/4L IS II USM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | EF 24-105mm f/3.5-5.6 IS STM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for zoom control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | EF 24mm f/1.4L II USM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | EF 35mm f/1.4L II USM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | EF 50mm f/1.2L USM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| EF 50mm f/1.4 USM | Camera and lens | √ | - | | Can be balanced at any focal length | | |
| | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | | |
| EF 50mm f/1.8 STM | Camera and lens | √ | - | | Can be balanced at any focal length | | |
| | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | Can be balanced at any focal length | | |



| Camera Brand | Model | Lens Model | Mounting Status | Balance Adjustment | Camera Backing Base | Servo Zoom/Focus Motor | Installation Remark |
|--------------|---------------------------|-----------------------|--|--------------------|---------------------|---|-------------------------------------|
| BMD | BMPCC 6K, BMPCC 6K PRO | EF 85mm f/1.2L II USM | Camera and lens | √ | √ | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | |
| | | EF 85mm f/1.4L IS USM | Camera and lens | √ | - | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | |
| | | EF 85mm f/1.8 USM | Camera and lens | √ | - | | |
| | | | Camera, lens and servo motor (for focus control) | √ | √ | Servo zoom & focus motor installed on either side | |
| | | EF 70-200mm f4 USM | Camera and lens | √ | - | | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for focus control) | √ | - | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |
| | | | Camera, lens and servo motor (for zoom control) | √ | - | Servo zoom & focus motor installed on either side | Can be balanced at any focal length |

| Camera Brand | Camera Model | Compatible Lens | Note |
|--------------|-----------------------|--|--|
| RED | DSMC2 Camera | The maximum compatible lens is Angenieux 30-90 T2. | 1. Cine cameras have multiple modules and different users may have different modules, so the compatible maximum lens may vary from one to another. 2. The compatibility list may not include all the compatible cine cameras and lens. Please check with customer service if you have a question. |
| Panasonic | EVA1 | The maximum compatible lens is Canon EF 70-200mm f4 USM. | |
| Sony | FS5 | The maximum compatible lens is Sony E PZ 18-110mm F4 G OSS. | |
| | FS7 | | |
| | FX9 | | |
| | Z280 | The lens cannot be replaced due to its all-in-one body. | |
| Canon | C200 | The maximum compatible lens is Canon EF 70-200mm f4 USM. | |
| | C300 | | |
| BMD | URSA Mini Pro 4.6K G2 | The maximum compatible lens is Sigma 18-35mm T2 | |
| ARRI | Alexa mini | The compatible lens includes ARRI Ultra Prime series(16mm-100mm lens). | |
| | Alexa mini LF | | |